



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
CH. ACCESS	-/--
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
INFO	INFO
EPG	EPG
FAV/TEXT F.P.	FAV
ASPECT	 / NET TV
TEXT HOLD	 / SMART
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
POWER OFF	SHIFT+POWER
COMPONENT 1	SHIFT+1
COMPONENT 2	SHIFT+2
HDMI 1	SHIFT+3
HDMI 2	SHIFT+4
INPUT PC	SHIFT+5
VIDEO 1	SHIFT+6
VIDEO 2	SHIFT+7
VIDEO 3	SHIFT+8
VIDEO 4	SHIFT+9
POWER ON	SHIFT+0
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
N	SHIFT+OK
DIRECT TV REC.	SHIFT+ TV/DTV
TEXT INDEX	SHIFT+INFO
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
FWD	SHIFT+BLUE

