



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
-/--	-/--
DISPLAY	
LANG	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
EPG	EPG
FAV	FAV
ASPECT	

ORIGINAL	SUPERIOR
HOLD	
RED / TV/RADIO	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
NICAM	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
MEDIA	SHIFT+6
SUBTITLE	SHIFT+
FAV-	SHIFT+LEFT
FAV+	SHIFT+RIGHT
SKIP PREV. / REVEAL	SHIFT+ P -
SKIP NEXT / SUBPAGE	SHIFT+ P+
STOP	SHIFT+
REC	SHIFT+RED
REW / INDEX	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD / SIZE	SHIFT+BLUE

