



ORIGINAL	SUPERIOR
STANDBY	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
---	-/--
PRT	
GOTO	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/LIST	OK
	BACK
TV/RADIO	TV/DTV
i	INFO
EPG	EPG
FAV	FAV
RED	RED

[illegible]