



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
C	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
PRESETS	-/--
SCREEN	
LANG.	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / SELECT	OK
RETURN	BACK
SLEEP	SLEEP
/ INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
ANGLE	/ NET TV
/	/ SMART
RED / ZOOM / 	RED
GREEN / REPEAT / 	GREEN
YELLOW / ROOT	YELLOW
BLUE / TITLE	BLUE
SEARCH MODE	SHIFT+EXIT
/ SWAP	SHIFT+2
DISPLAY	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
HDMI CONTROL	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

