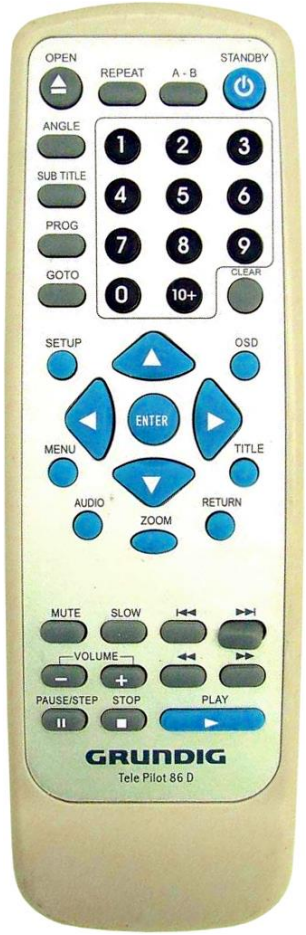

ORIGINAL	REPLACEMENT
STANDBY	POWER
AUDIO	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
OSD	
ZOOM	
ANGLE	
SUB TITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
OPEN	
PAUSE / STEP	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SETUP	SHIFT+
A - B	SHIFT+BACK

ORIGINAL	REPLACEMENT